


FRU LIST

This chapter gives you the FRU (Field Replaceable Unit) listing in global configuration of AL1513. Refer to this chapter whenever ordering for parts to repair or for RMA (Return Merchandise Authorization).


NOTE: Please not WHEN ORDER FRU PARTS, that you should check the most up-to-date information available on your regional web or channel (<http://aicsl.acer.com.tw/spl/>). For whatever reasons a part number change is made, it will not be noted in the printed Service Guide. You MUST use the local FRU list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

Note: To scrap or to return the defective parts. You should follow the local government ordinance or regulations on how best to dispose it, or follow the rules set by your regional Acer office on how to return it.

Exploded Diagram Part List

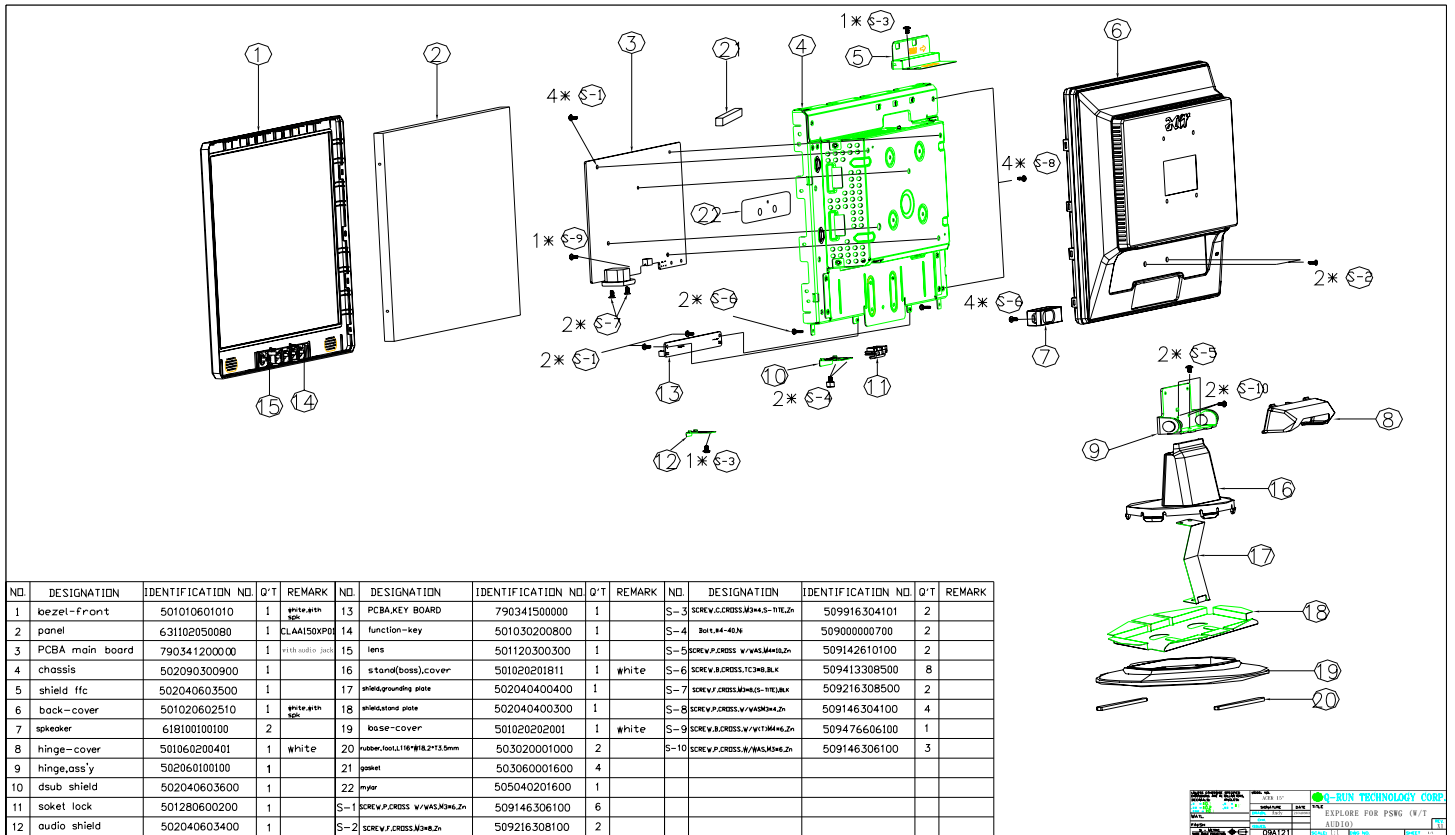

Picture	Part Name	Description	Part No.
	Front Bezel with	Bezel Ass'y w/ SPK White	714030000500
	function buttons	Bezel Ass'y w/o SPK White	714030000501
		Bezel Ass'y w/ SPK Black	714030000504
		Bezel Ass'y w/o SPK Black	714030000505
		Bezel Ass'y w/ SPK (B+S)	714030000502
		Bezel Ass'y w/o SPK (B+S)	714030000503
	Hinge Cover	Cover Hinge White	501020200401
		Cover Hinge Black	501060200400
	Stand Cover	Stand Cover White	501020201811
		Stand Cover Black	501020201810

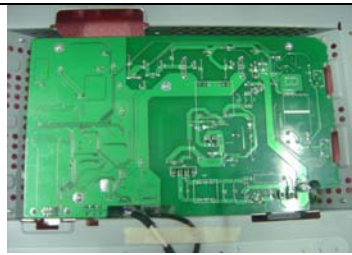
	Speaker	Speaker 1W 8ohm P=30mm	618100100100
	Back Cover	COVER,BACK,BLACK,W/SPK R,LE1501 COVER,BACK,BLACK,W/O SPKR COVER,BACK,WHITE,W/SPK R,LE1501 COVER,BACK,WHITE,W/O SPKR	501020602511 501020602501 501020602510 501020602500
	MAIN BOARD	PCBA MAIN BOARD W SPK	790341200400
		PCBA MAIN BOARD W/O SPK	790341200401

	Key Pad	PCBA Keypad w/SPK PCBA Keypad w/o SPK	790341500000 790341500001
	Panel	LCD PANEL 15" HSD150Mx15-B00(HANNSAT R)	631102050090
	LVDS Cable	HRN Ass'y LVDS 20P 80mm	430302000090
	Chassis	Chassis Chassis painting	502090300900 502090300901
	HRN 8P 160mm	HRN Ass'y 8P 110mm	430300800250R

		M/B Screw	Screw M3x6x0.45 Screw M4*6	509146306100 509476606100
---	--	-----------	-------------------------------	------------------------------

SCHMEATIC

Keypad Diagram

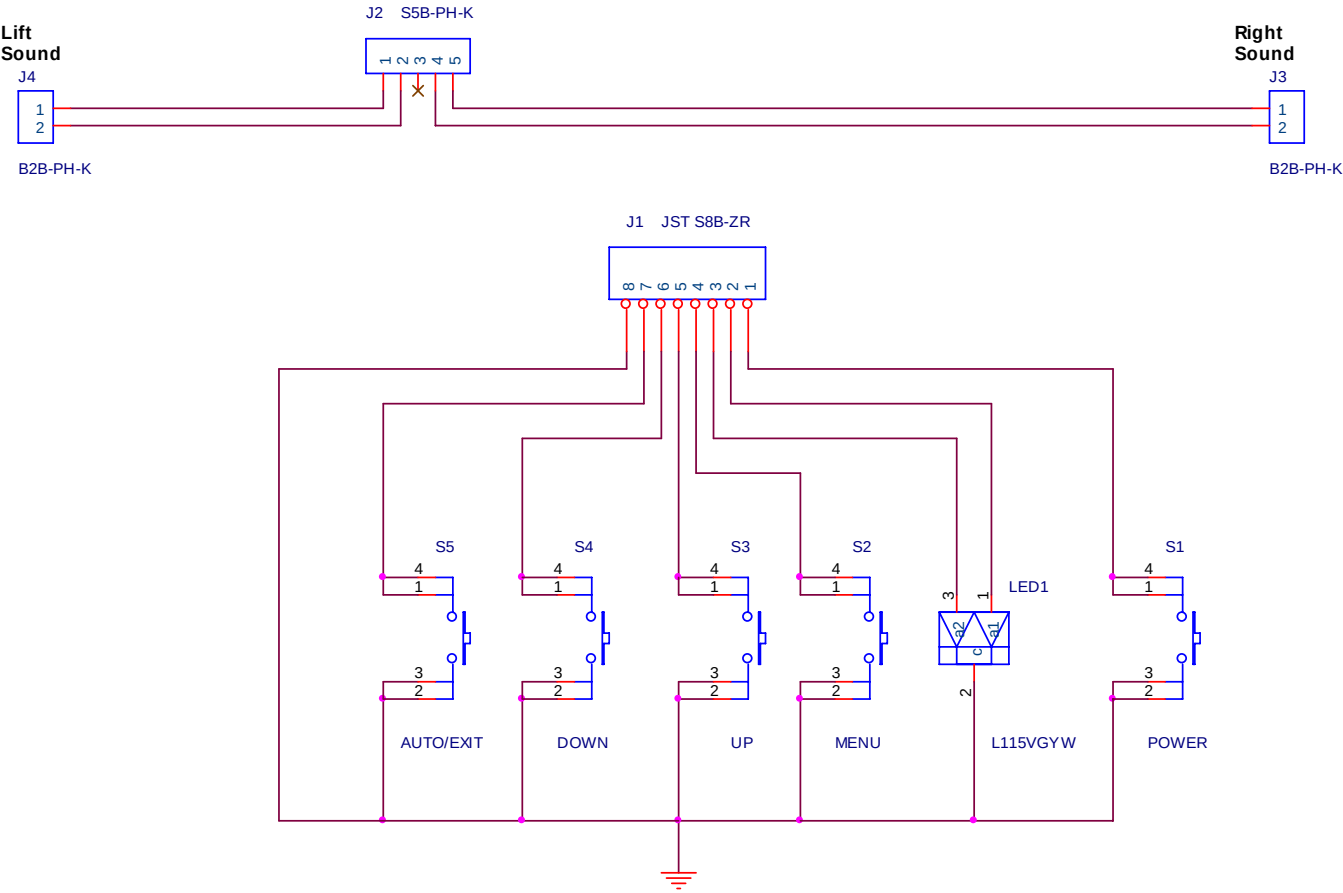


Interface Board Schematic


ACER-15 Schematic
Diagram
LVDS Interface PCBA 2
Layers PCB.

HannStar TFT PANEL


SCHEMATIC	SHEET
1.0 Contents, Revision History	1
1.1 Top Level	2
2.0 Keyboard	3
3.0 Analog Input	4
4.0 TSU16AL	5
5.0 Panel Interface	6
6.0 Regulator	7
7.0 Inverter	8
8.0 Power	9
9.0 Sound	10
9.1 Keypad	11



Reversion of History
REV1
REV A

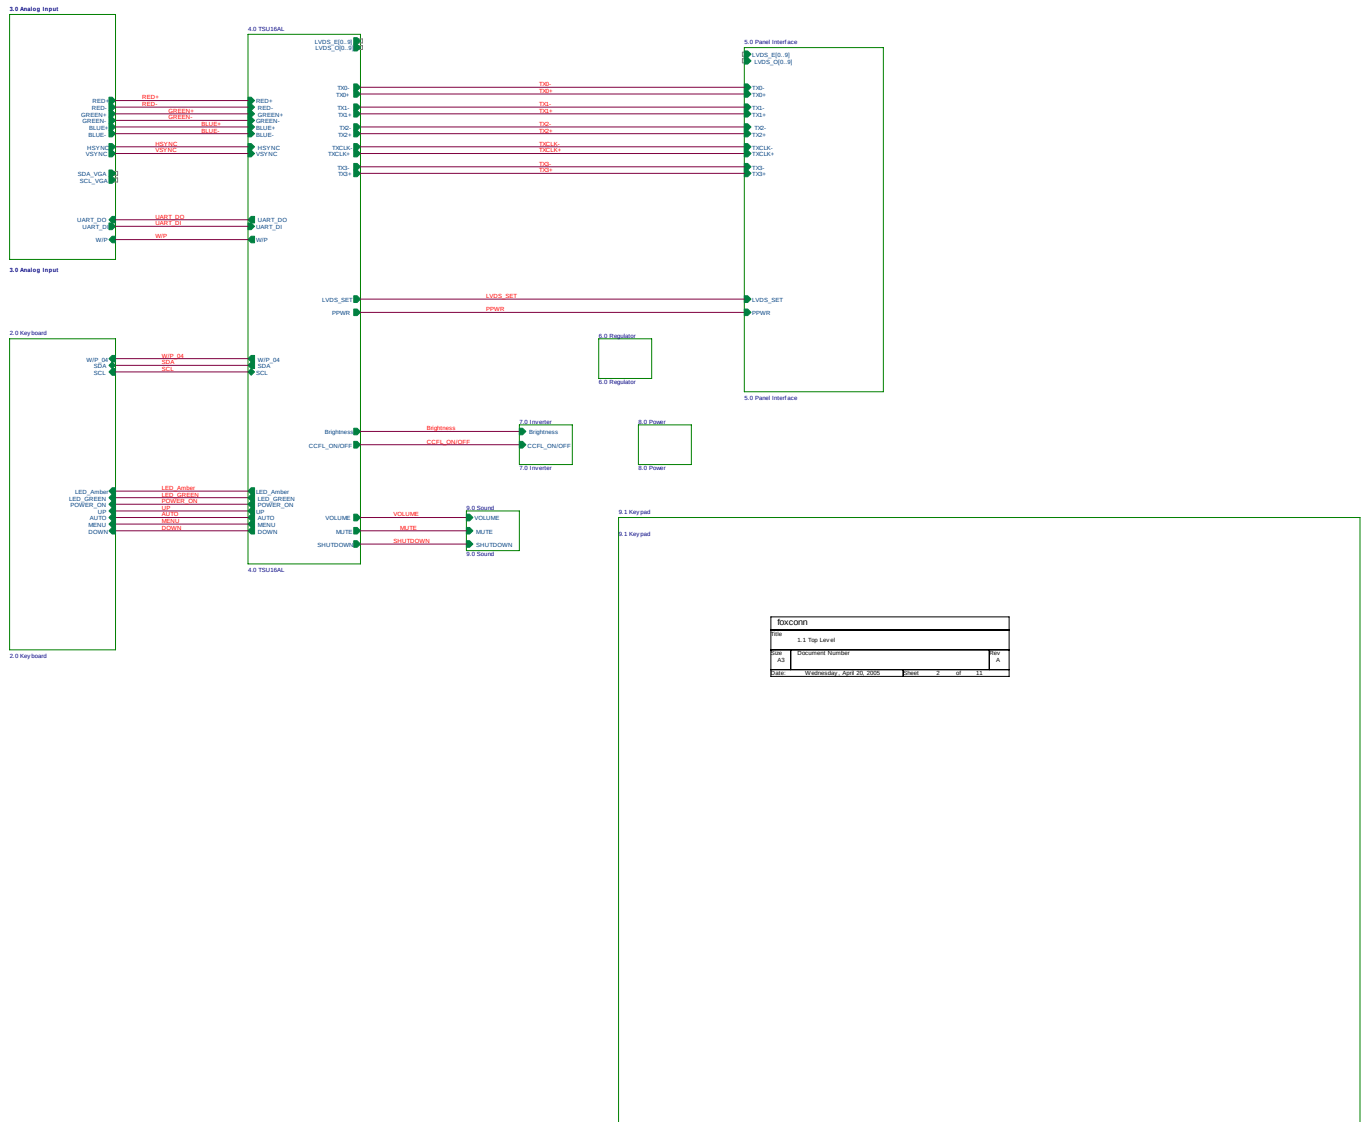

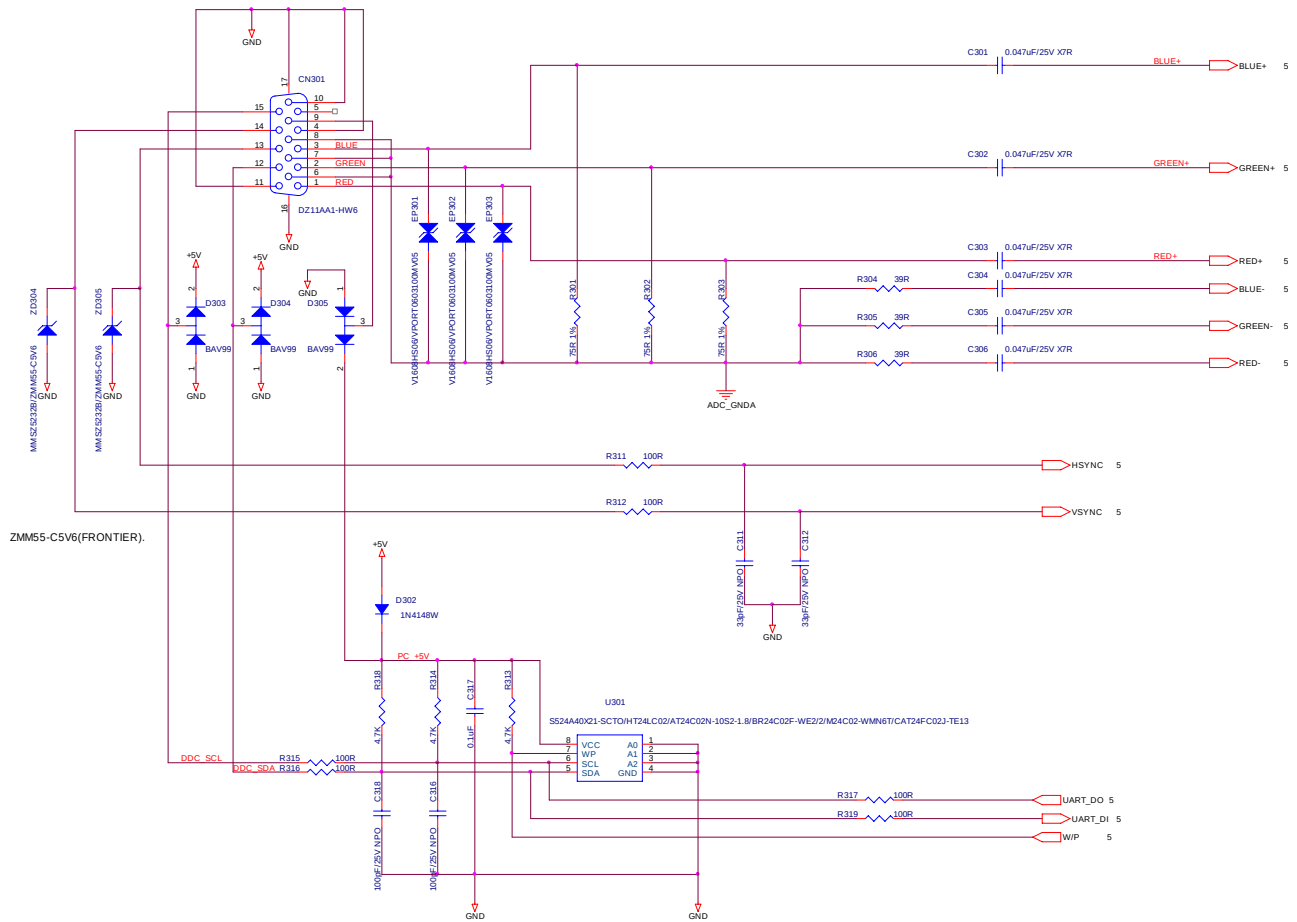


FOXCONN			
File	3.0 Analog Input		
Size	Document Number	Rev	
A3		A	
Date	Wednesday, April 20, 2005	Sheet	4 of 11




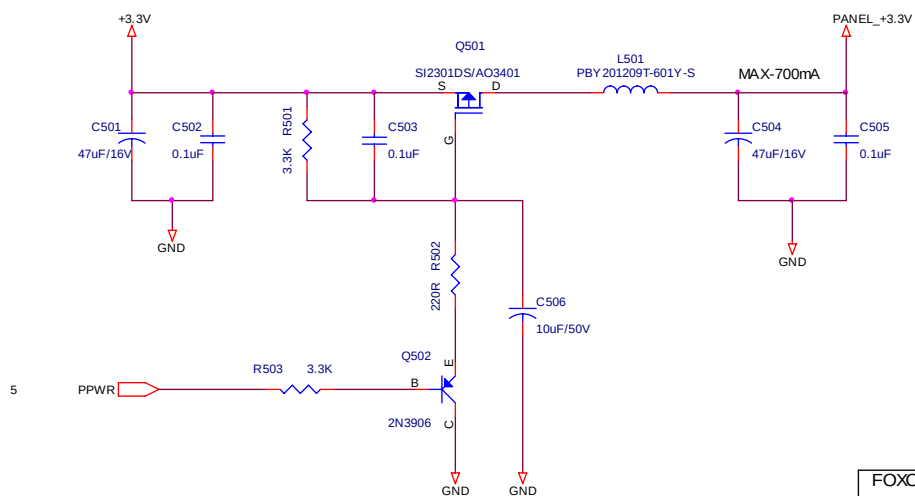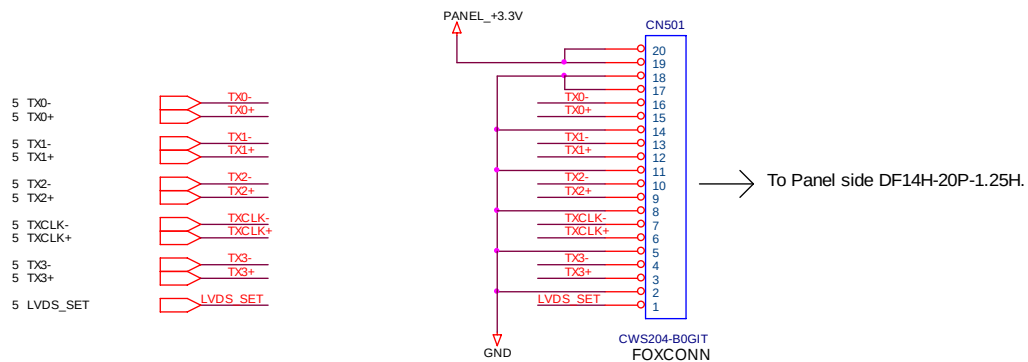


FOXCONN			
Title			
5.0 Panel Interface			
Size	Document Number		Rev
A4			A
Date:	Wednesday, April 20, 2005	Sheet	6 of 11

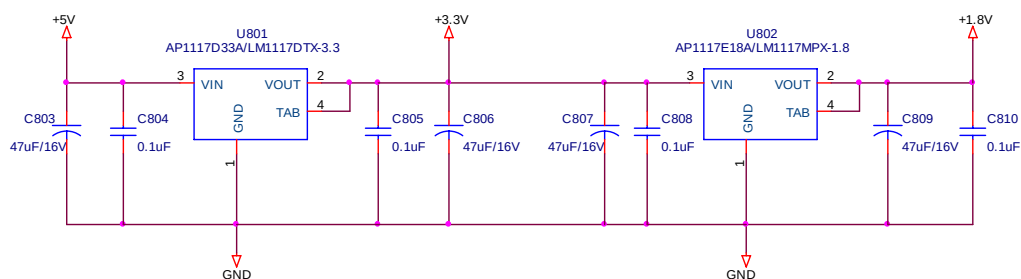

FOXCONN			
Title			
6.0 Regulator			
Size	Document Number		Rev
A4			A
Date:	Tuesday, January 04, 2005	Sheet	7 of 10

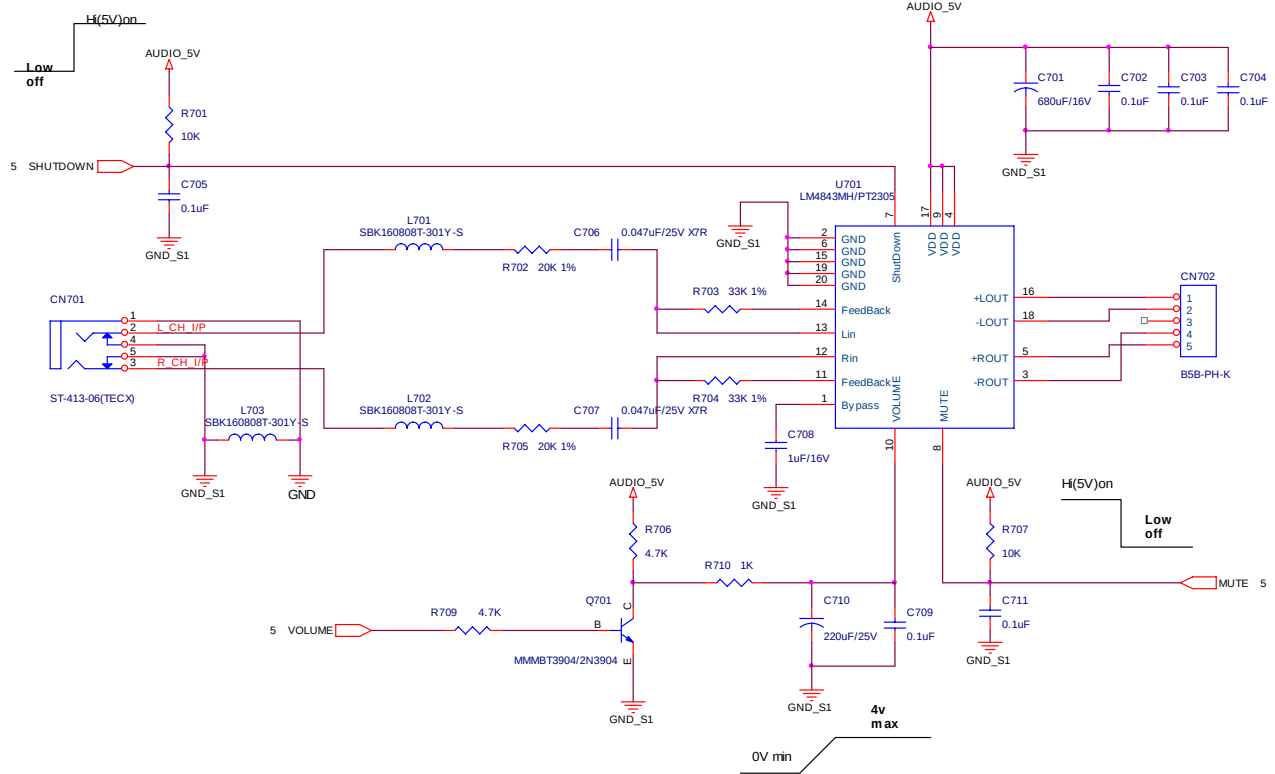


FOXCONN		
Title 9.0 SOUND		
Size A4	Document Number	Rev A
Date: Saturday, April 16, 2005	Sheet 10	of 11

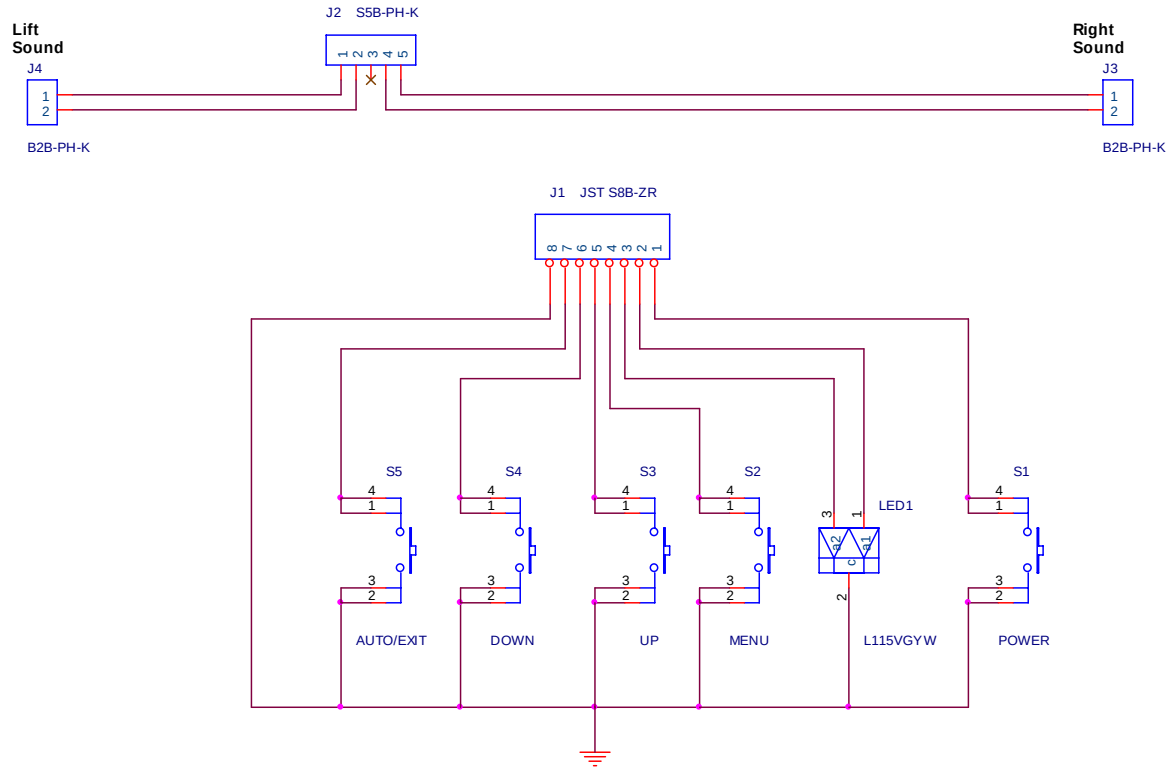


FOXCONN			
Title			
Key pad			
Size	Document Number		Rev
Custom Doc>			A
Date:	Saturday, April 16, 2005	Sheet	11 of 11

POW/INV Board Schematic

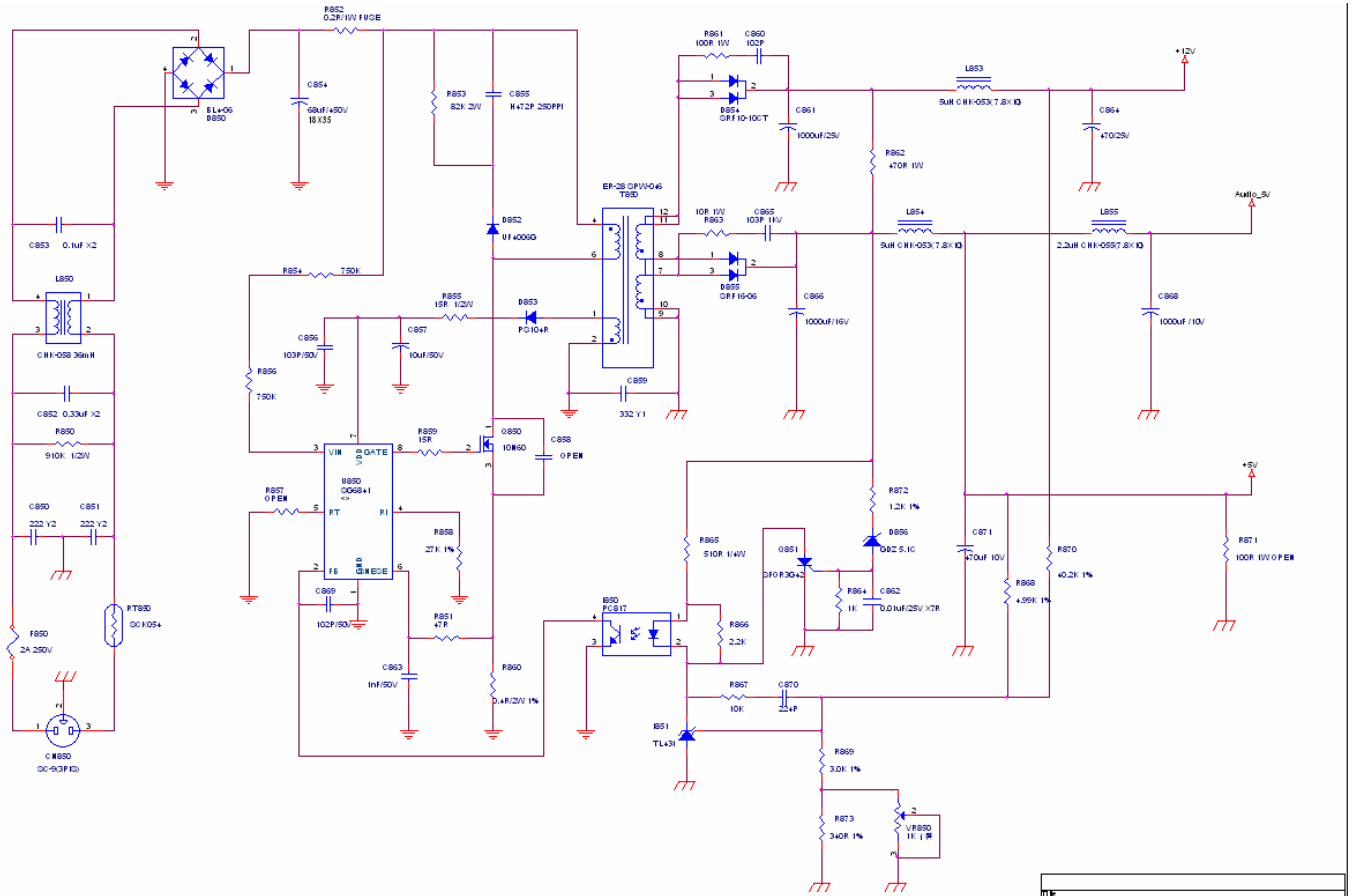

Title		
Acer 15 All in one Power		
Doc. No.	Document Number	Rev.
1.3		A
Date: Tuesday, January 01, 2008 Sheet 9 of 11		

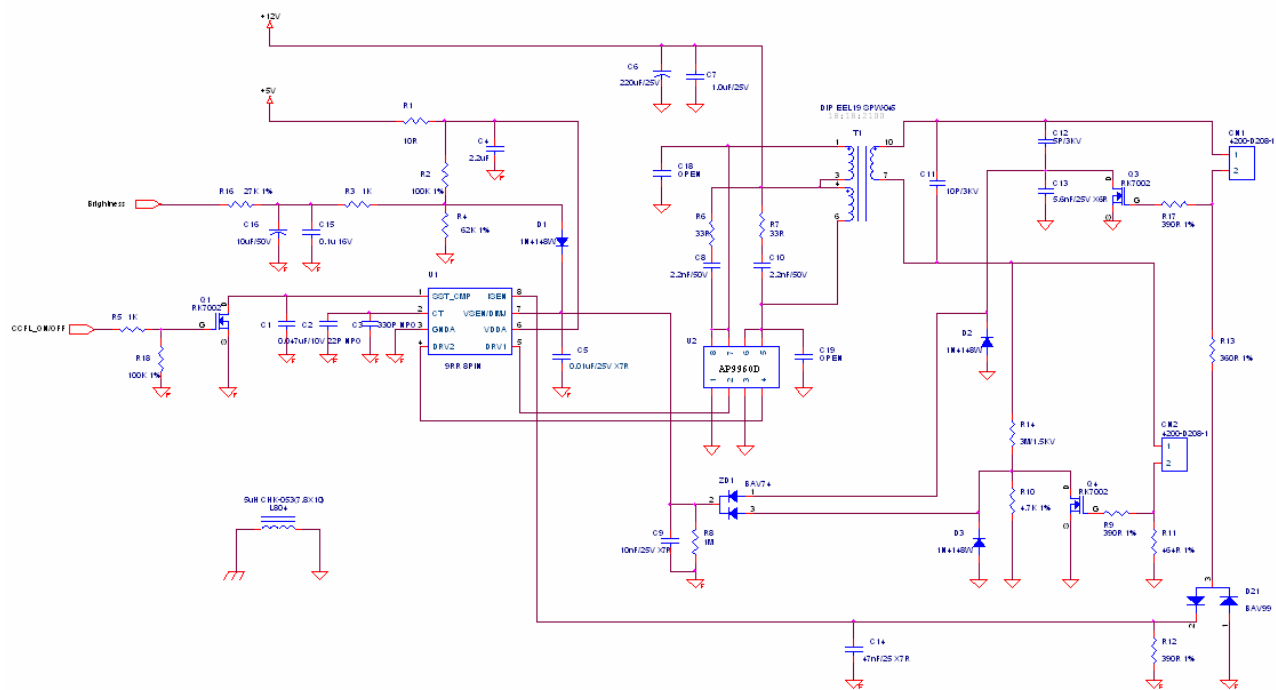

Title		
Acer 15 all in one Inverter		
Rev	Document Number	Rev
A3		A
Date: Tuesday, January 04, 2005 Sheet 8 of 11		